

B Pillar Trim - Left Side

Operation Code: 15090102

Removal

1. Open door.
2. Position driver seat as far forward as possible.




3. Remove seat belt cover.



4. Remove bolt securing seat belt to B pillar.
Torque 45 Nm.



5. Remove airbag trim cover.

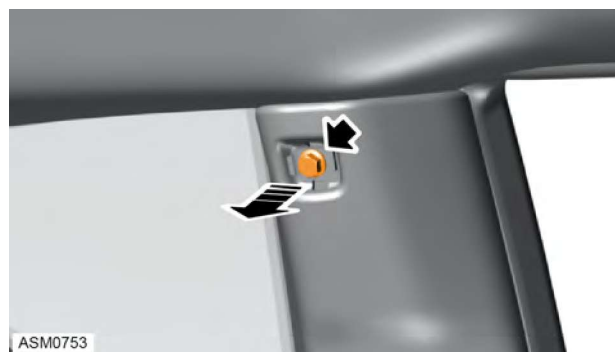

6. Remove M6x20 bolt securing B pillar trim to B pillar.
Torque 10 Nm.



7. Carefully pull B pillar trim to disengage clips (x2).
8. Remove B pillar trim.

Installation

1. Installation is the reverse of removal procedure.