


## Rear Quarter Trim - Left Side


Operation Code: 15110102

### Removal


1. Remove rear bulkhead trim. Refer to [Rear Bulkhead Trim Panel, page 15-9.](#)
2. Remove B pillar trim. Refer to [B Pillar Trim - Left Side, page 15-7.](#)

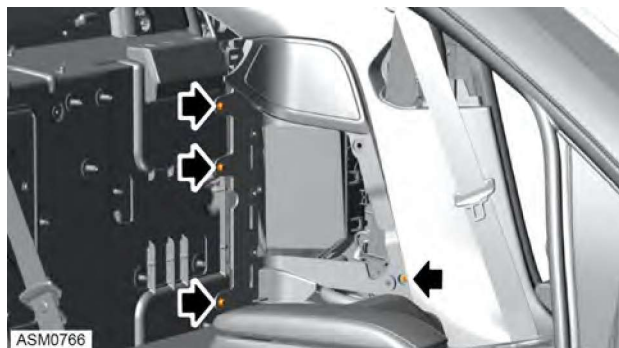

3. Remove M6x20 bolts (x3) securing rear quarter trim to rear bulkhead. **Torque 7 Nm.**
4. Remove M5x16 bolt securing rear quarter trim to bodyside panel. **Torque 4 Nm.**

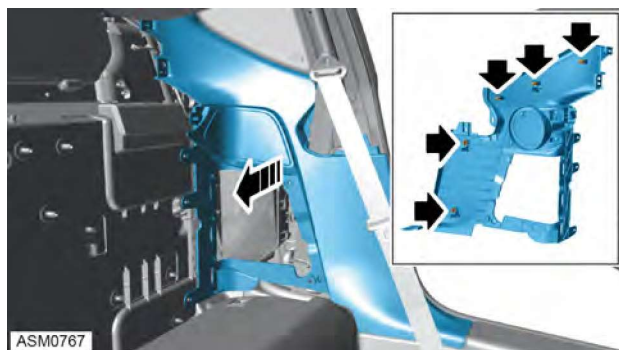

5. Carefully pull rear quarter trim to disengage clips (x5) securing trim panel to bodyside panel.

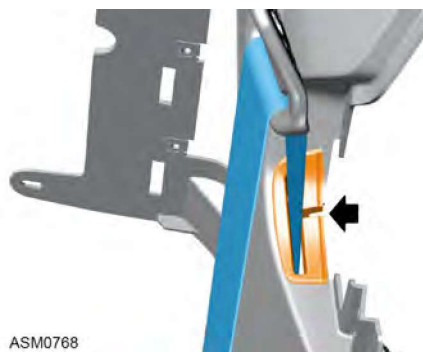

6. Remove seatbelt from rear quarter trim.
7. Remove rear quarter trim.

### Installation

1. Installation is the reverse of removal procedure.