


Rear Bulkhead Trim Panel


Operation Code: 15110602

Removal

1. Move both seats as far forward as possible.

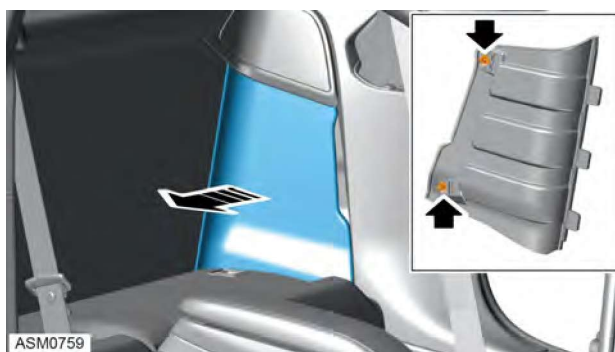

2. Carefully pull and remove left side rear quarter insert trim panel.
3. Carefully pull and remove right side rear quarter insert trim panel.

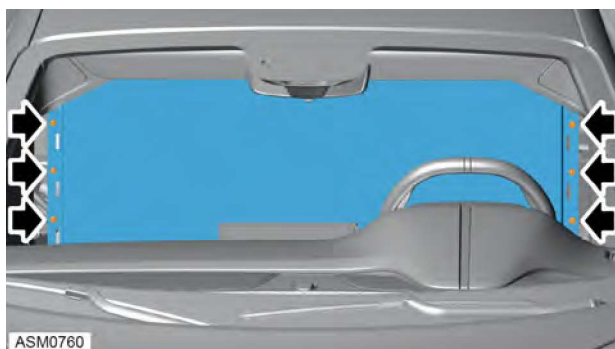

4. Remove M5x16 bolts (x6) securing lower bulkhead trim panel to rear bulkhead. **Torque 4 Nm.**
5. Remove lower rear bulkhead trim panel.



6. Remove M6x20 bolt securing upper trim to rear bulkhead. **Torque 7 Nm.**



7. Carefully pull upper bulkhead trim panel to disengage clips (x6) securing trim panel to rear bulkhead.
8. Remove upper rear bulkhead trim.

Installation

1. Installation is the reverse of removal procedure.